


REMOTE BUTTONS
ONE FOR ALL REMOTE

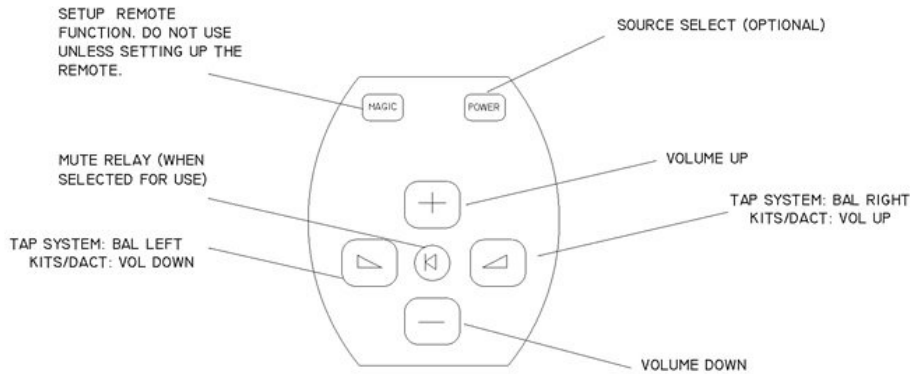

THE REMOTE RECIEVER AND HANDHELD REMOTE ARE SHIPPED SET FOR DAEWOO TV CODES.
THE KITS/DACT REMOTE CONTROL BOARD CAN BE JUMPER SELECTED TO RECIEVE SONY IR CODES

TO SETUP THE REMOTE TO THE PROPPER MODE:

- 1- PRESS AND HOLD THE 'MAGIC' BUTTON UNTIL THE LED BLINKS 2 TIMES (HOLD BUTTON ABOUT 4 SECONDS)
- 2- RELEASE THE 'SETUP' MODE BUTTON

FOR DAEWOO IR CODES:


- 3- MOMENTARILY PRESS THE BUTTON
- 4- MOMENTARILY PRESS THE BUTTON
- 5- MOMENTARILY PRESS THE BUTTON
- 6- MOMENTARILY PRESS THE BUTTON
- 7- MOMENTARILY PRESS THE BUTTON

FOR SONY IR CODES:

- 3- MOMENTARILY PRESS THE BUTTON
- 4- MOMENTARILY PRESS THE BUTTON
- 5- MOMENTARILY PRESS THE BUTTON
- 6- MOMENTARILY PRESS THE BUTTON
- 7- MOMENTARILY PRESS THE BUTTON

THE LED WILL BLINK TWICE TO INDICATE THE REMOTE HAS BEEN PROGRAMMED

REMOTE BUTTONS
RADIO SHACK BRAND REMOTE

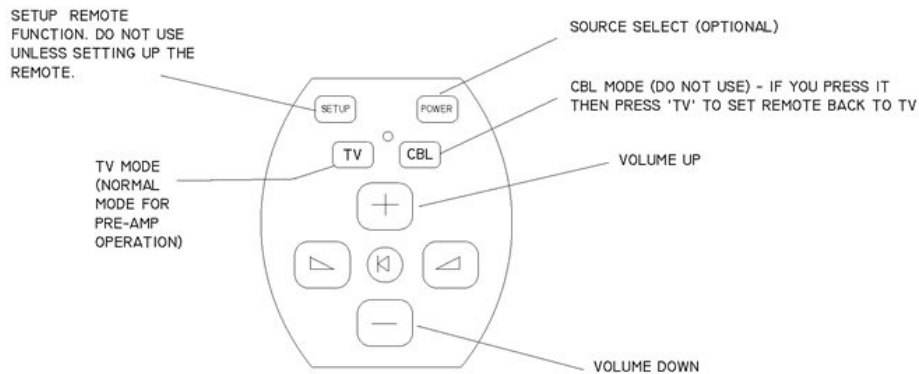

THE REMOTE IS PROGRAMMED TO CONTROL A DAEWOO TV. THE PRE-AMP THINKS IT'S A DAEWOO TV. TO SETUP THE REMOTE TO THE PROPPER MODE:

- 1- PRESS AND HOLD THE 'SETUP' BUTTON UNTIL THE LED BLINKS 2 TIMES (HOLD BUTTON ABOUT 4 SECONDS)
- 2- RELEASE THE 'SETUP' MODE BUTTON

- 3- MOMENTARILY PRESS THE BUTTON AND THEN RELEASE IT
- 4- MOMENTARILY PRESS THE BUTTON AND THEN RELEASE IT
- 5- MOMENTARILY PRESS THE BUTTON AND THEN RELEASE IT
- 6- MOMENTARILY PRESS THE BUTTON AND THEN RELEASE IT

THE LED WILL BLINK TWICE TO INDICATE THE REMOTE HAS BEEN PROGRAMMED

